



Video Guide

SignalView CL Imaging System

Quick User Guide

WORKFLOW

1. Turn on the instrument using the power switch located on the back panel.
2. Log in to your account.
3. Tap “Open Drawer” and load the membrane.
4. Tap “Close Drawer”, then the system will display an auto-exposure preview image.
5. Set the exposure parameters as needed.
6. Tap “Capture” to acquire the image.
7. Adjust and save the images.
8. Tap “Open Drawer” and remove the membrane, then clean the imaging tray.
9. Shut down the software first, then turn off the system.



Exposure Settings

Auto Exposure

- **Single:** Software auto-calculates exposure.
- **Multiple:** Set multiplier in “Settings” > “Multiple Mode” to capture 2-5 images.

Manual Exposure

- **Single:** User-defined exposure time.
- **Multiple:** Select mode (“Continuous / Accumulation / Extended”), initial time, and total captures.

Installation and Relocation Guide



**Transportation
Screw**

Shipping Mode



Operating Mode



IMPORTANT

Remove Transportation Screw Before First Use

- To protect the imager's internal components during transport, a Transportation Screw has been installed.
- You must remove this screw to switch the instrument from Shipping Mode to Operating Mode.
- Failure to remove the transportation screw before powering on may cause severe mechanical damage.